

SUPER P

Supervisor Pass

For individual setting of menu functions.

- Function blocking
- Presetting of forced processes
- Controlling the maintenance deadline
- Other functions (see FRIAMAT operating instructions)

Usable for:

- FRIAMAT 7 Prime
- FRIAMAT Prime eco
- FRIAMAT XL

Note:

To order, please download the application form on www.aliaxis.de in the product catalogue under Supervisor Pass.



Reference	Weight [kg]	BX
623101	0,010	1