

# FPASS

## Remote start pass

For remote start of all FRIAMAT fusion units

- With reader wand
- With scanner
- Including carrying belt

**Note:**

Reading in the code only activates the START button. Unable to stop fusion unit.



Reference	Weight [kg]	BX
624003	0,010	1